

MODEL :F06 NEW CONVERTER BOARD



REV :0.1

PCBA REV :

PCB REV :A








BOM PART NUMBER :

DATE: Wed Apr 22 09:45:01 2015

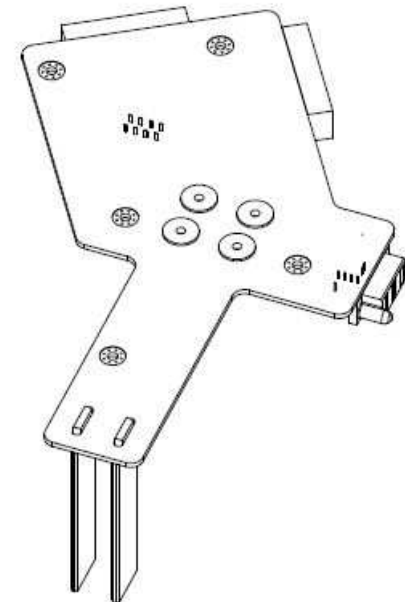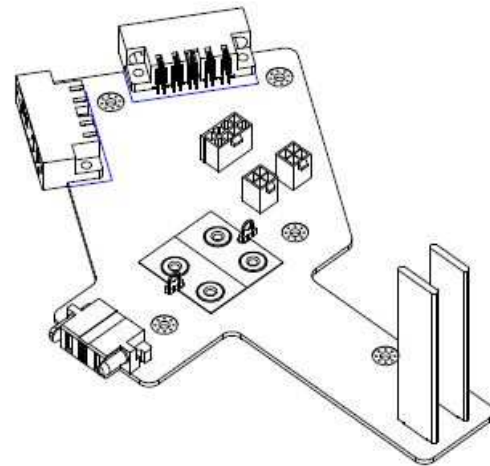


**BLOCK DIAGRAM**

<b>Quanta</b>	DEPARTMENT	DESIGNER	PROJECT	DOCUMENT NUMBER	REV
	CCBU	MARK CHEN	F06_CnvtBrd	<Q_NUMBER>	0.1
	REVIEWER	STANLEY CHANG	SIZE C	DATE Wed Apr 22 09:45:01 2015	SHEET 2 OF 4

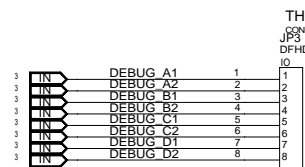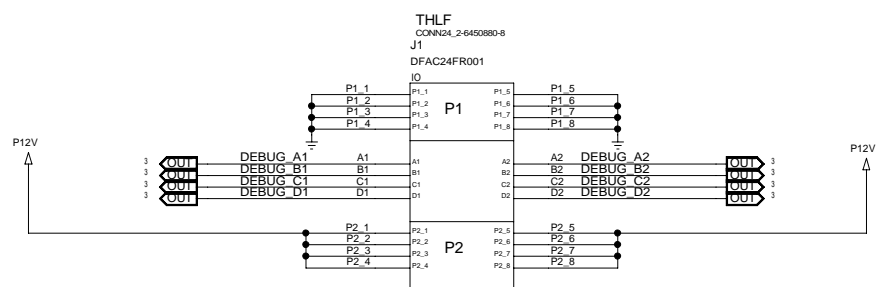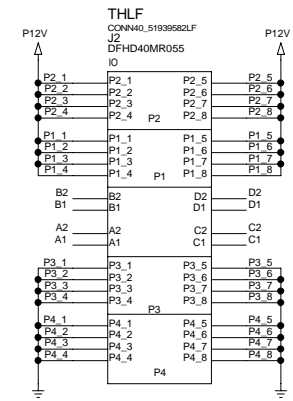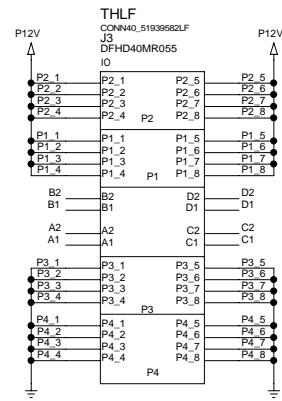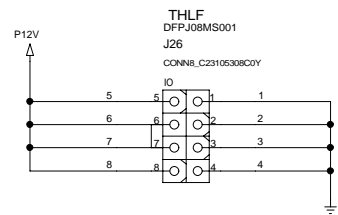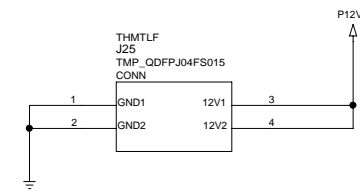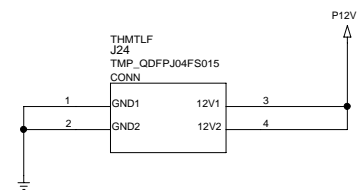

# BUS BAR SYMBOL

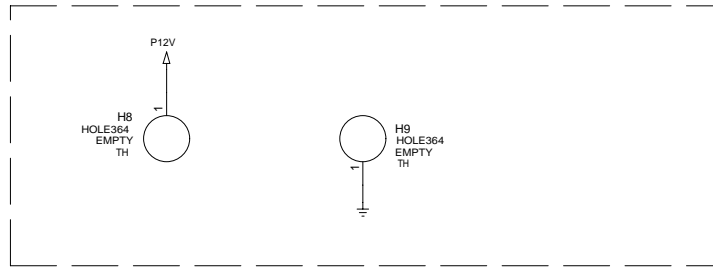

## BOM NOTE:

### PCB






### LABEL



### BUS BAR PART NUMBER



# FOR BUS BAR CABLE



# SCREW HOLE

